


# DOEPFER MUSIKELEKTRONIK GMBH

## A-138p Performance Mixer Input

Position and function of the trimming potentiometers and jumpers  
(pcb bottom view)

signal display adjustment  
(trimming potentiometers)

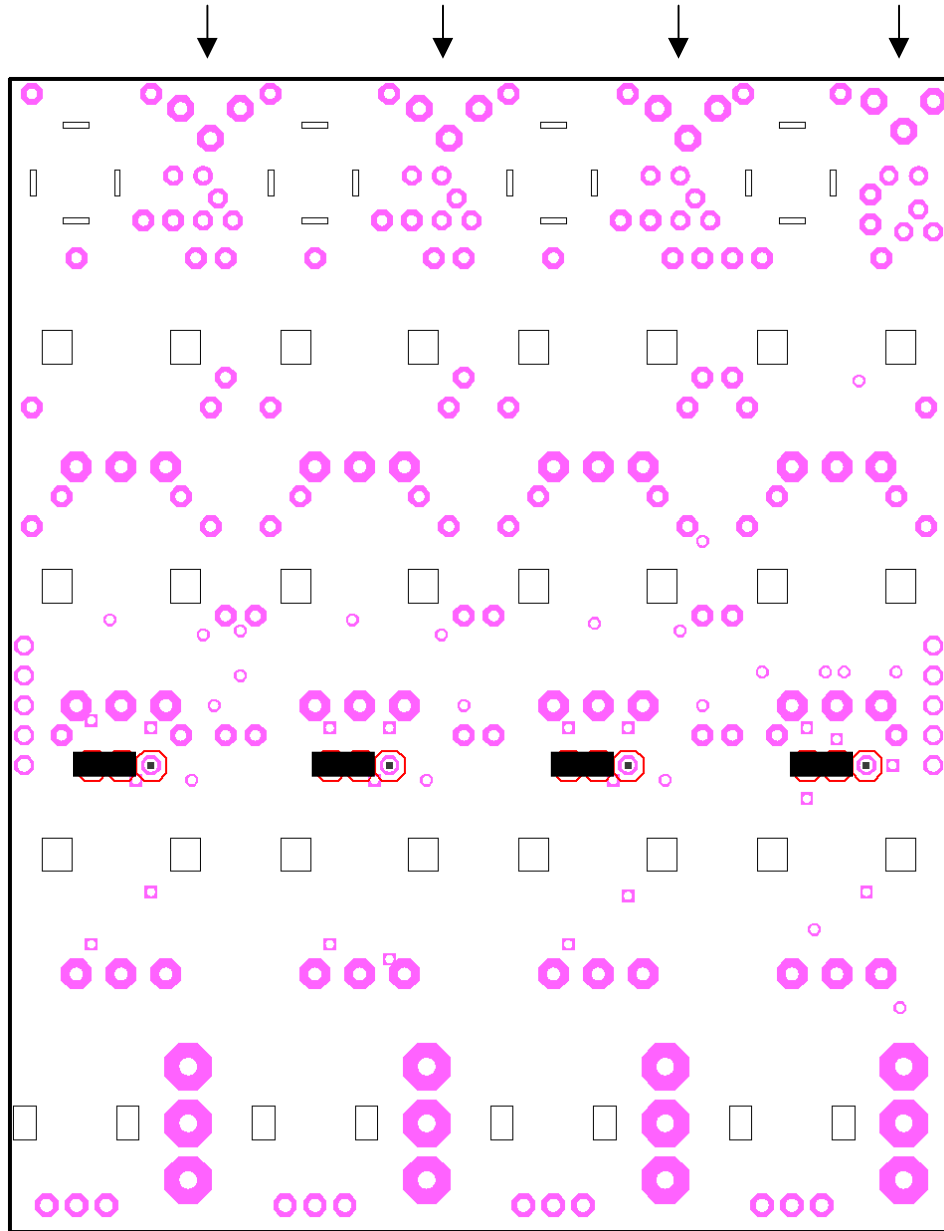

Aux pre/post jumpers  
left = pre main level  
right = post main level