

Modell Flame Echometer		Midi Implementation Chart		
Function		Transmitted	Recognized	Remarks
Basic Channel	Default Changed	1-16* 1-16	1-16* 1-16	* memorized
Mode	Default Messages Altered	4 Mono (M=4) x	4 Mono (M=4) x	(per Track)
Note Number:	True Voice	0-127 0-127	0-127** 0-127**	
Velocity	Note ON Note OFF	o 9nh, v=1-127 x 9nh, v=0	o 9nh, v=1-127 o 9nh, v=0	o = since Version 1.07
After Touch	Key's Ch's	x x	x x	
Pitch Bender		o	x	7 bit resolution
Control Change 0-119		o	x	
Prog Change	: True #	x x	x x	
System Exclusive		o***	o***	Dump User Data
System Common	: Song Pos : Song Sel : Tune	x x x	x x x	
System Real Time	: Clock : Commands	o**** o****	o o	don't transmit CONTINUE *****
Aux Messages	: Local ON/OFF : All Notes OFF : Active Sensing : Reset	x x x x	x x x x	
Notes		* recognized Channel = Transmitted Channel ** MIDI-to-CV fix Note-Range: 24-83 (5 Octaves) *** only in Edit-Mode **** can be set ON/OFF for extern Sync (Slave) in Edit Mode ***** recognized CONTINUE = transmit START (reset Position)		

Mode 1: OMNI ON, POLY
Mode 3: OMNI OFF, POLY

MODE 2: OMNI ON, MONO
MODE 4: OMNI OFF, MONO

o: Yes
x: No