

ADDAC804 AUDIO INTEGRATOR USER'S GUIDE

ADDAC804 AUDIO INTEGRATOR


USER'S GUIDE
June.2012

INDEX

3. SENDS
4. RETURNS
5. ENVELOPE FOLLOWERS
6. iOS CONNECTION
7. TECH SPECS

ADDAC804 AUDIO INTEGRATOR

USER'S GUIDE
June.2012

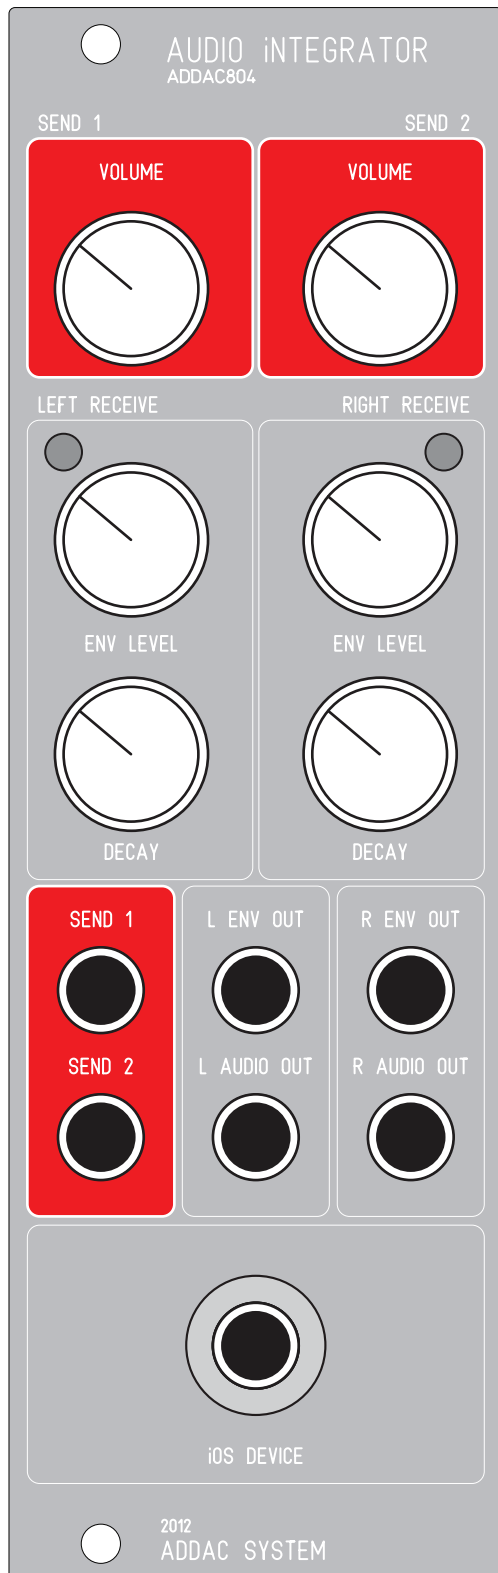

SENDS SECTION

SENDS VOLUME KNOBS


These 2 send inputs are internally mixed and sent to the iOS device microphone input.

SENDS INPUTS

Audio inputs

ADDAC804 AUDIO INTEGRATOR

USER'S GUIDE
June.2012

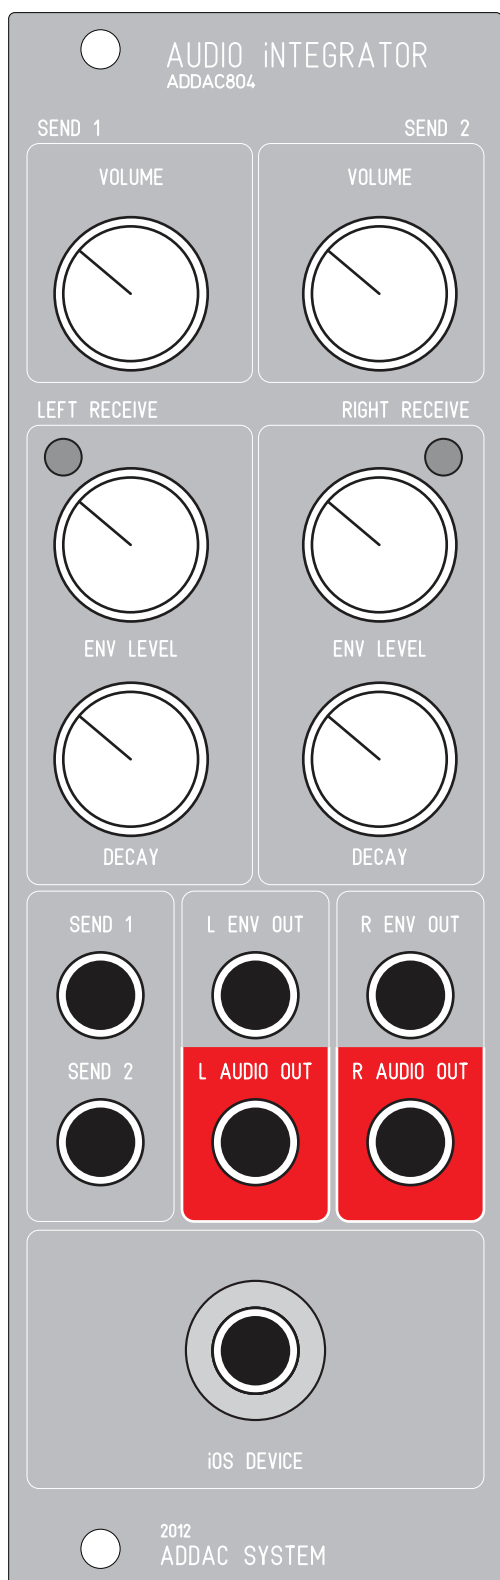


RETURNS SECTION

RETURNS OUTPUTS

Audio outputs from the iOS device Line Output

ADDAC804 AUDIO INTEGRATOR

USER'S GUIDE
June.2012

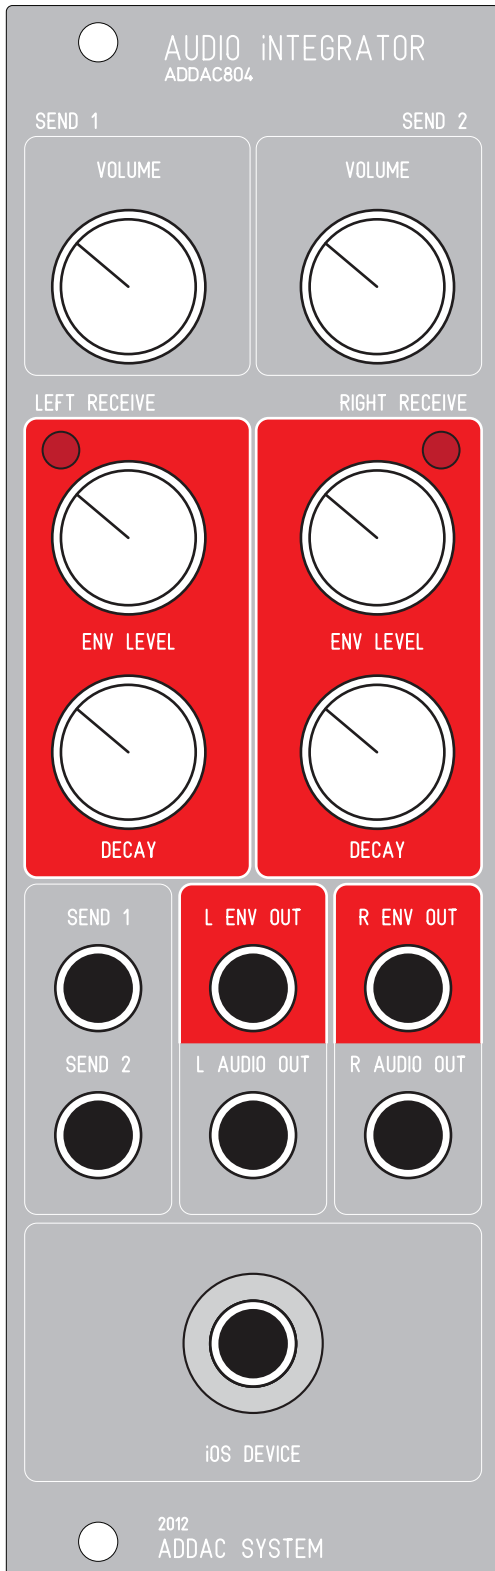

ENVELOPE FOLLOWERS SECTION

ENVELOPE FOLLOWERS


These 2 independent Envelope Followers are individually connected to the iOS device Left and Right output. Level adjusts the amplitude of the outputs. Decay smooths CV output.

ENVELOPE CV OUTS

The Envelope Follower CV outputs

ADDAC804 AUDIO INTEGRATOR

USER'S GUIDE
June.2012

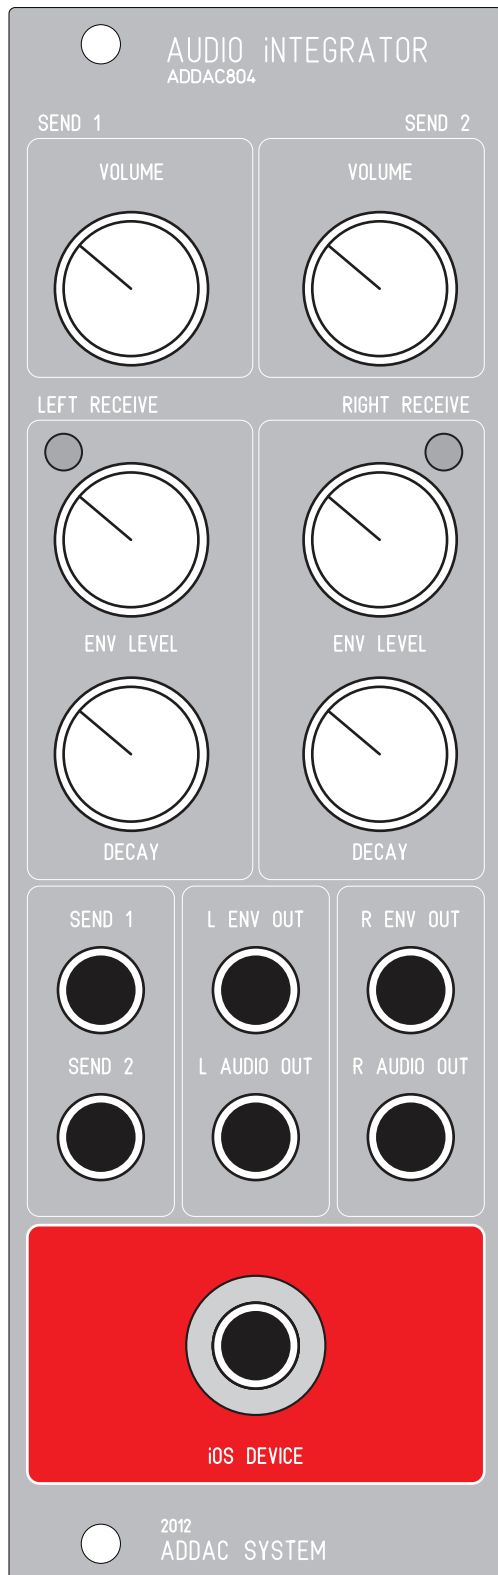

iOS connection

4 POINTS JACK CONNECTOR

Connect your iOS Device here through the provided cable

ADDAC804 AUDIO INTEGRATOR

USER'S GUIDE
June.2012

Tech Specs

Mechanical:

- . Format: Eurorack
- . Width: 4 HP
- . Depth: 1.5 cm

Electrical:

- . Compatible with +-12v and +-15v power supplies.
- . Max current: 20mA.
- . Bus Board Cable: 8 × 2 IDC (Doepfer style) connector.

Extra:

- . iOS duplex audio cable included.

USER'S GUIDE

ADDAC804 AUDIO INTEGRATOR

June.2012

ADDAC SYSTEM