



LEVEL - This is the overall level of the affected signal. Adjust this for the correct sound level between off and on.



IN - This is the input to the pedal. This jack dis-connects power, so unplug when not in use.



OUT - This is the output of the pedal. Plug this either into your amp or into any other effects you want after this effect.



Bypass Switch - Kick the switch to change from *effect on* to *effect off*.



Status LED (Red/Green) - When the effect is on the LED is Red. By default the LED is Green when off. If you want the LED off in bypass HOLD the Bypass Switch for several seconds until the LED Blinks, after that the LED will be off in Bypass. Hold again for several seconds to turn the LED back on in Bypass.



Bypass Mode Toggle - This toggle switch lets you select between either buffered or true bypass. To the left is buffered, to the right is true bypass. This switch is functional only in bypass mode. When the pedal is engaged, it is automatically buffered.



DC Power Jack - This allows you to power your pedal from a DC power supply. This has the same pin-out as the standard pedal supplies, tip is ground, and sleeve is 9V. Make sure you use a filtered supply—this is especially important on high gain overdrive and distortion pedals, since they tend to amplify the noise of the power supply.



Skid Plate - The skid plate helps keep your pedal in place. Since many people put their pedals on a pedal board, we ship the skid plate unattached so you can put Velcro® on the pedal base without having to remove it. If you want to use the skid plate, it attaches in just a few seconds.



Cusack Music * 494 Lincoln Ave, Suite 10 * Holland, MI 49423 * www.cusackmusic.com