


FUTURERETRO

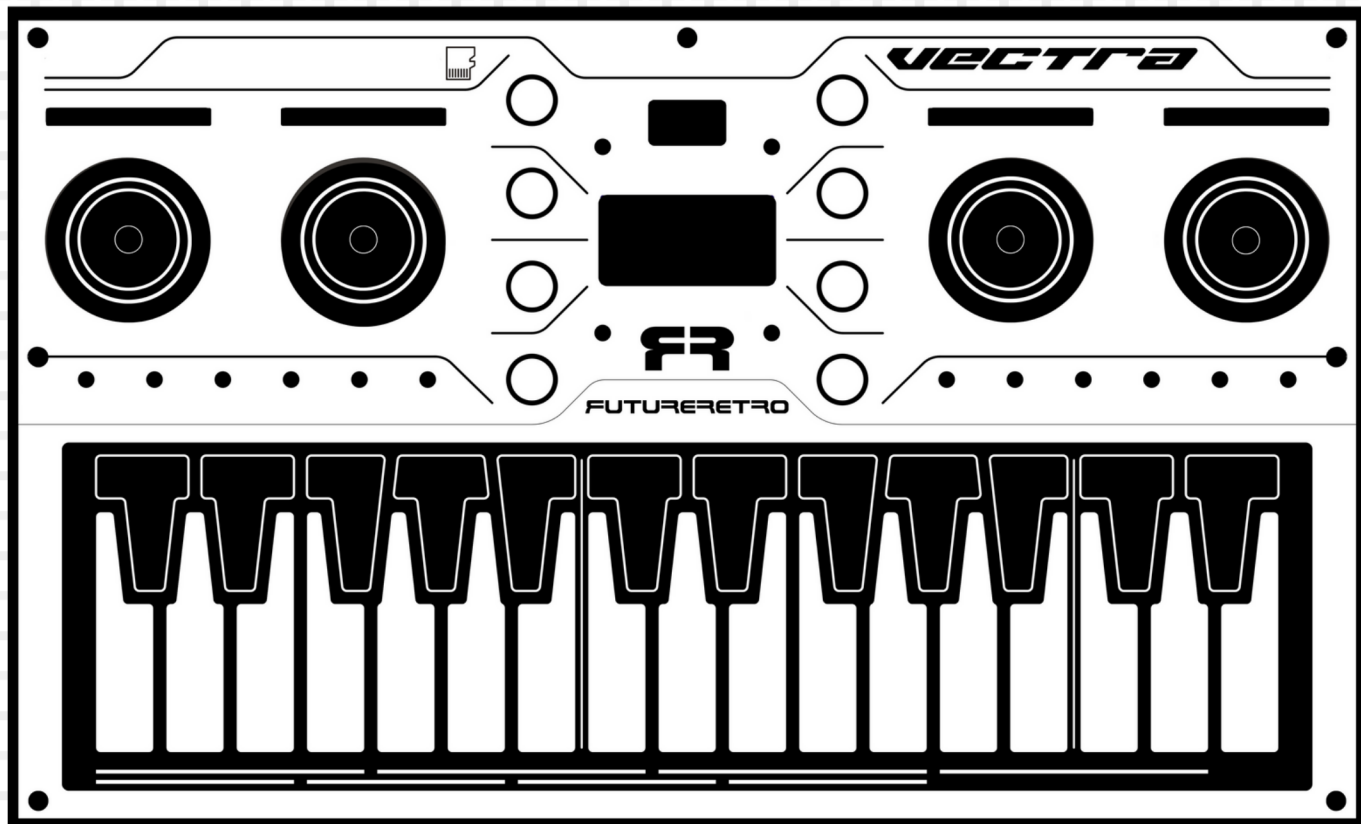

VECTRA

Quick Start Guide

- Turn power on.
- Turn knob 1 to select preset 001 (303_WAV2).
- Press LOAD button.
- Press ARP/SEQ button.
- Press knob 5 to start sequence.
- Turn knob 6 to change tempo.
- Press ARP/SEQ knob to access play page.
- Press knob 3 to randomize the rhythm. (Do this a few times until you get a rhythm you like.)
- Press knob 2 to randomize the velocity.
- Press knob 1 to randomize the pitch.
- Press knob 7 to activate length and direction change via keyboard.
- Touch white keys to change length (or loop point).
- Touch black keys to change direction.

