



glōc Clock Generator/Processor

## Spread Control ——

The Spread control determines the range of clock multiplications and divisions. Reduction of Spread will align all outputs to the J BPM.

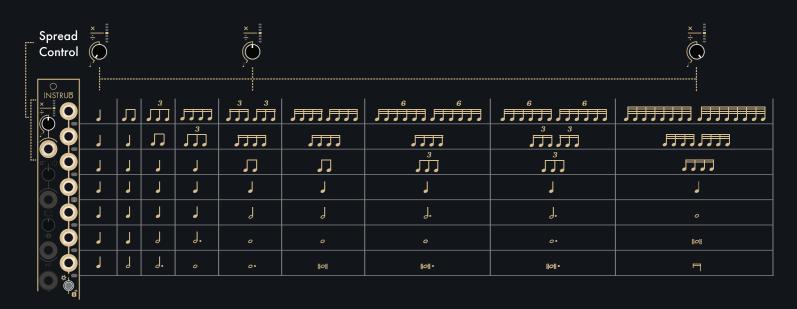

## Probability Control

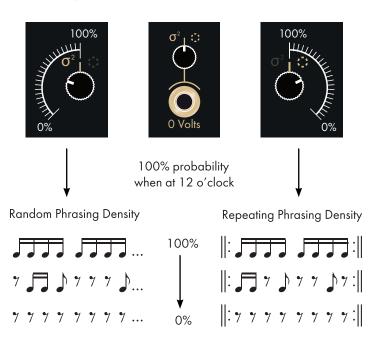

## Programming Mode





Programming Mode - This mode is used to lock/unlock the settings of individual outputs. Select the output via the Output Select Knob. Toggle lock/unlock with the Tap Tempo Button.



Unlocked outputs are unlit.
Selected output is lit white.
Selected output is lit mixed when locked.
Locked outputs are lit orange.



**Regular Mode** - Performs with defined locked states.



Live Mode - Ignores any locked definitions.

**Note**: When outside **Programming Mode** press and hold **Tap Tempo Button** to save state between power cycles.

## Clock In \_\_\_\_

