

MALEKKO

INVERT MIX MANUAL V.1

MALEKKOHEAVYINDUSTRY.COM

TABLE OF CONTENTS



SPECIFICATIONS	3
INSTALLATION	4
DESCRIPTION	5
DIAGRAM	6
WARRANTY	7

SPECIFICATIONS

FORMAT:	2HP
DIMENSIONS:	15mm deep - EuroRack Standard
MAX CURRENT:	20mA

INSTALLATION


1. Remove module from packaging
2. Power down your modular synthesizer and disconnect the power cable from the wall outlet.
3. Attach the included power cable to the module's power connector and connect the other end to the power distribution bus in your EuroRack synthesizer case:
4. Position the module on the mounting rails in your EuroRack case and screw down mounting screws. Power up! If your case does not turn on properly then you have installed the module incorrectly. Simply power down and make sure to follow the diagram when reconnecting the module.

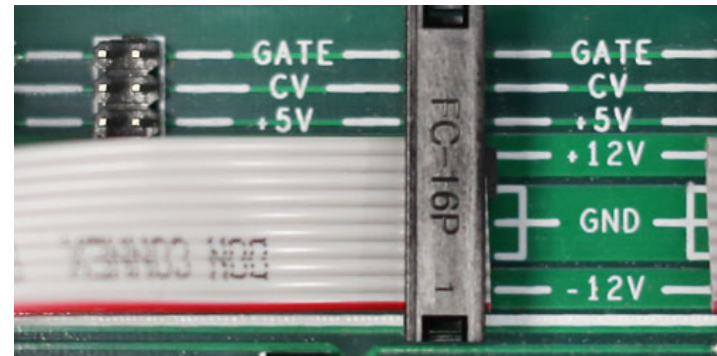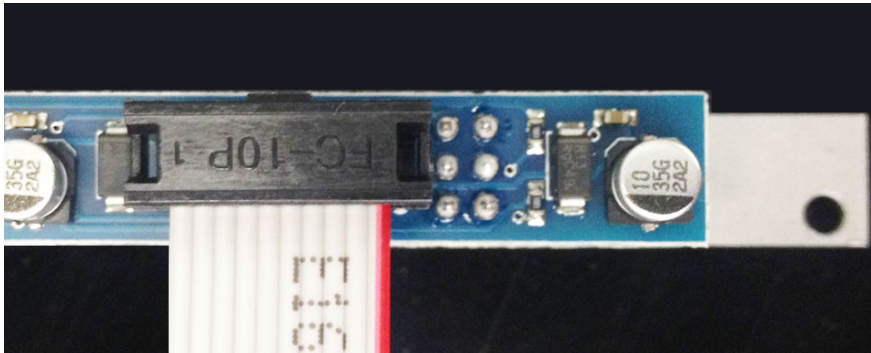

DESCRIPTION

MALEKKO INVERT MIX includes 3 audio and/or cv inputs, 3 inverted outputs as well as an inverted sum and non-inverted sum outs. Invert waveforms, envelopes etc.

- Three signal inverters (inputs)
- One inverted sum output
- One non-inverted sum output
- Audio and CV signal support

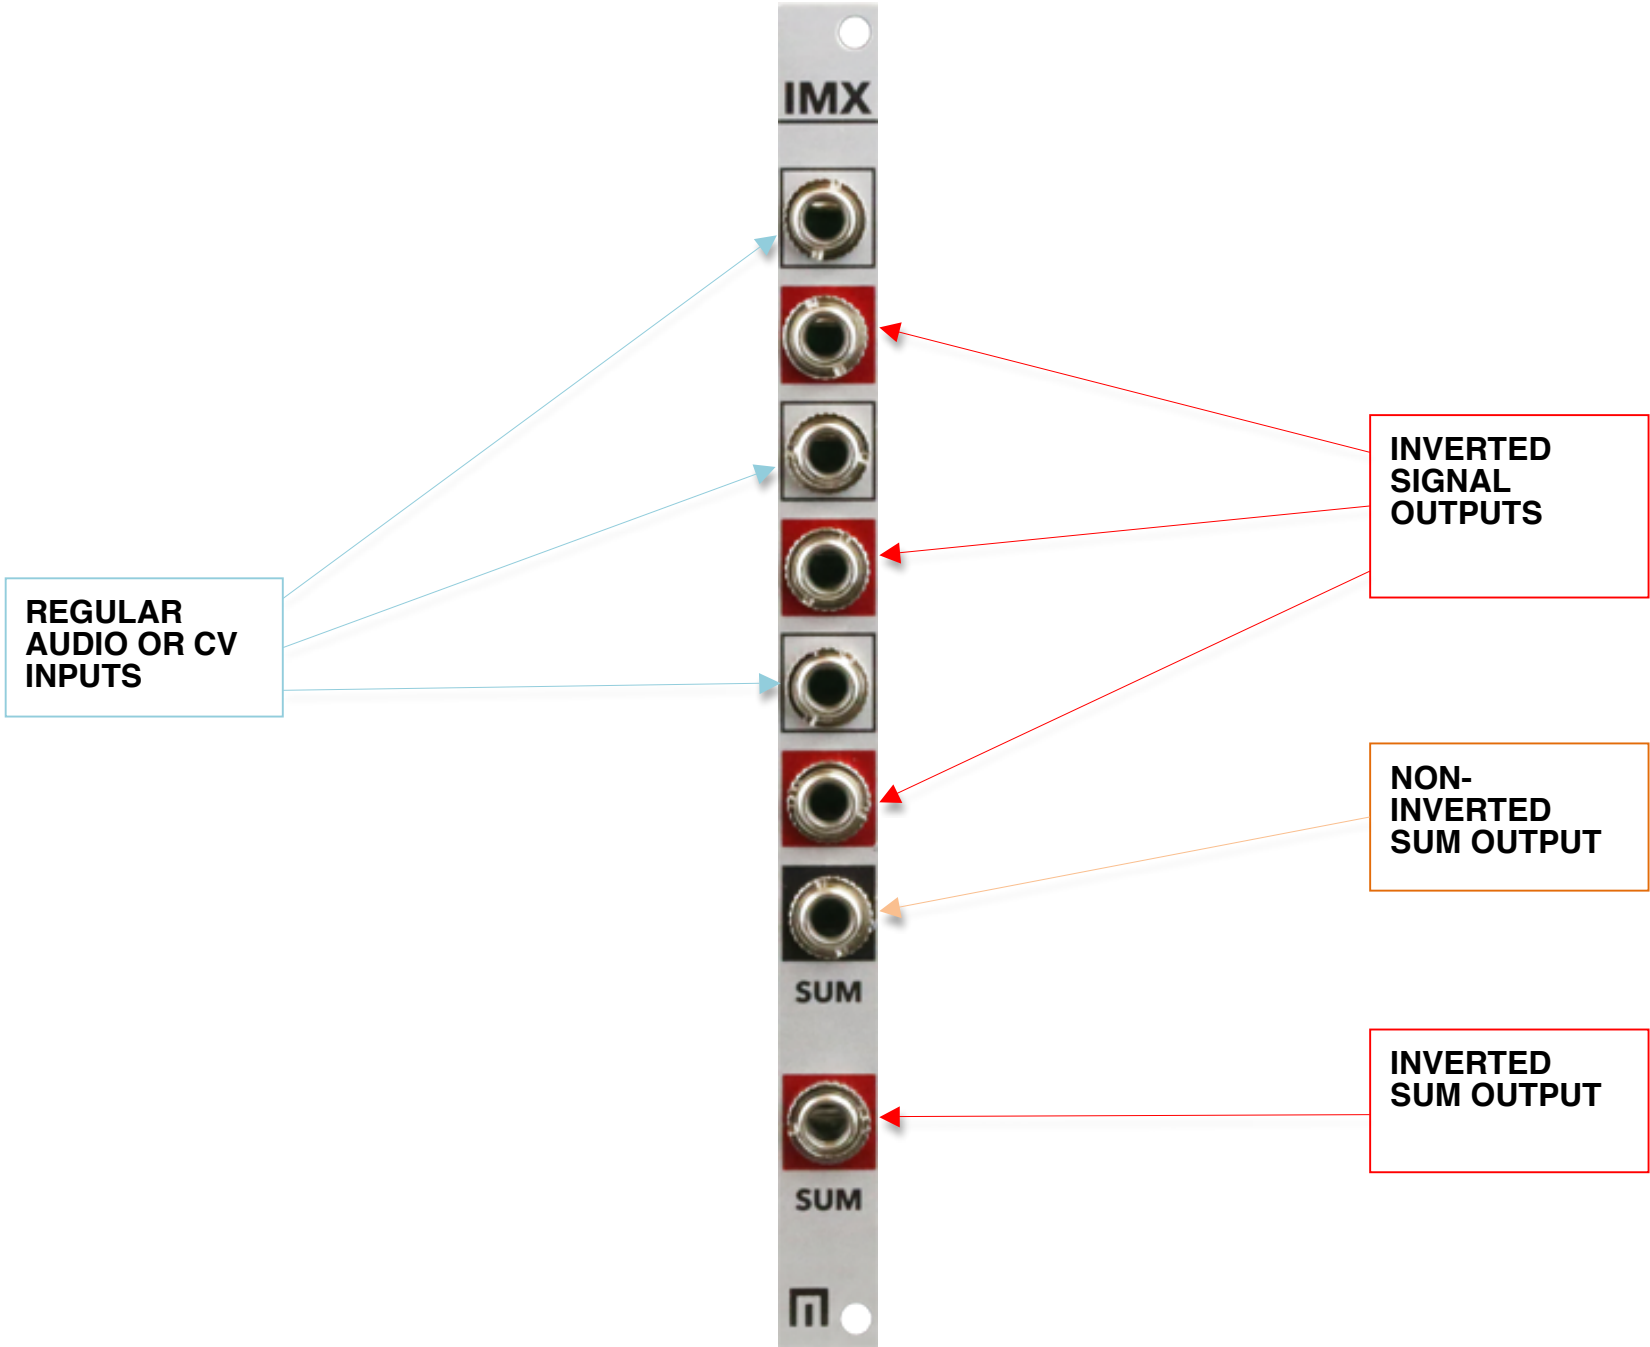

WARRANTY

This product is covered by the Malekko Heavy Industry warranty, for one year following the date of purchase. This warranty covers any defect in the manufacturing of this product. This warranty does not cover any damage or malfunction caused by incorrect use – such as, but not limited to, power cables connected backwards, excessive voltage levels, or exposure to extreme temperature or moisture levels.

The warranty covers replacement or repair, as decided by Malekko Heavy Industry. Please contact customer service via our website (www.malekkoheavyindustry.com) for a return authorization.