Rummage Guide



Thawney

Sensitivity

Adjust this knob to change the sensitivity of the circuit.

The White light below shows the raw pwm out.

Gate/CV Out

The changes detected are spread across outputs 1,2 & 3.

Out 1 - Red LED. Out 2 - Yellow LED. Out 3 - Green LED.

Output R is the Raw Gate and Wobbly CV Out. Represented by the blue LED.

Probe In

Input for the probe electrodes! These use a 3.5mm TRS cables like you find in headphones!

Midi Out

MIDI notes on Channel 1 and CC 80 are output via Type-A 3.5mm jack.

www.thawney.com